

EFTU - Turku



Turku Airport is the **fourth busiest airport in Finland** according to passenger numbers, located approximately 8 kilometers north of Turku city center. The airport is an integral part of the Scandinavian and Baltic aviation network and serves as an important hub for both commercial and private flights. Turku airport is highly accessible and strategically positioned.

One should note that Turku Airport is open 24 hours a day and offers ATC services during its operational hours. It is surrounded by flat terrain, and pilots should be aware of the weather conditions, especially during the winter months when heavy snow can be expected.


IATA	ICAO	Charts
TKU	EFTU	Finland AIP - EFTU

ATC positions

Turku is a controlled airport with aerodrome control- and approach control service. This service can be combined (tower-radar), or separate.

Logon code	Call sign	Frequency	Responsibilities
EFTU_TWR	TURKU TOWER	118.300	Ground movement, Turku Control Zone
EFTU_R_TWR	TURKU TOWER	118.300	Ground movement, Turku Control Zone & Terminal Area
EFTU_APP	TURKU RADAR	120.475	Turku Terminal Area

Ground layout

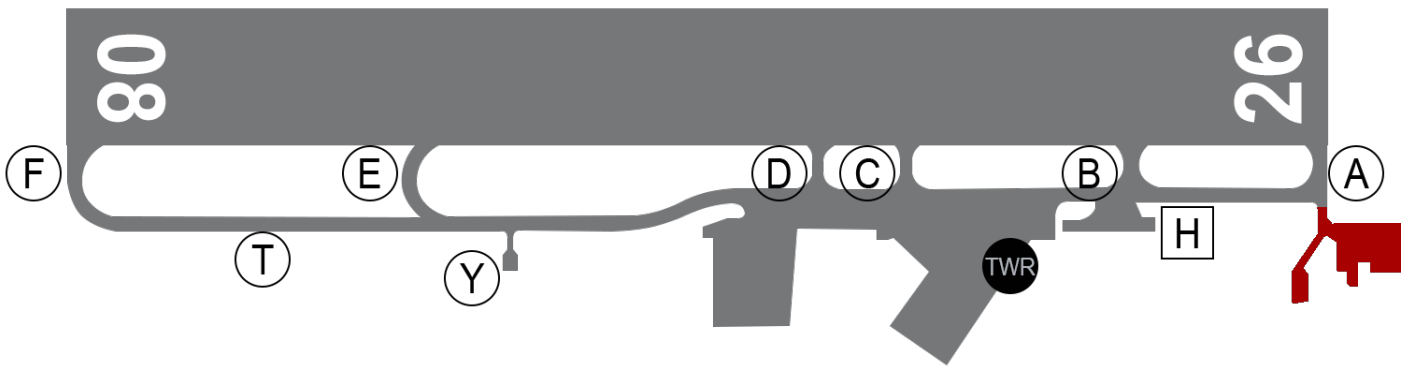

- The main apron serving passenger airlines is located next to the Control Tower
- Cargo flights are usually parked on the cargo apron next to taxiway D
- General aviation aircraft are parked on the Apron next to taxiway Y or B
- Medical helicopter base is located next to taxiway B south of the main taxiway

Frontier Guard apron is located next to taxiway A. There is also one hangar for Air Force QRA missions.

Runways


Turku is equipped with one runway 08/26. The preferred runway is considered to be runway 08.

Currently available stands

<https://stands.vatsim-scandinavia.org/?icao=EFTUframeless=true>

Stand restrictions

- Stands 5B and 8 can accomodate Code E and F aeroplanes (see table below)
- Stands 4, 5, 6 and 7 can accomodate Jet aircraft up to A321 / B739
- Cargo aircraft are parked on stands 9, 10, 12 and 12

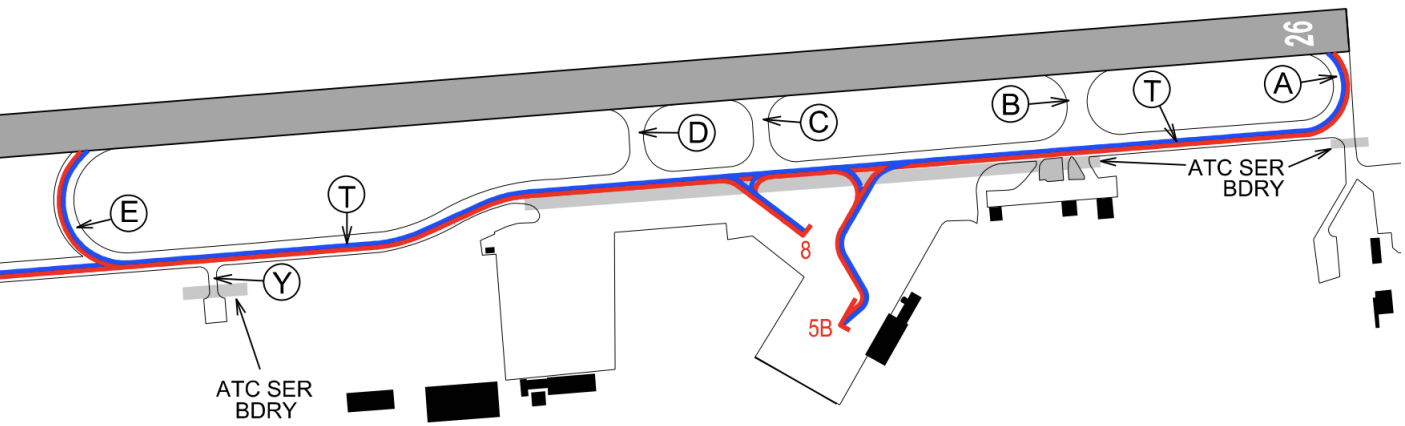

 Code E aeroplanes  Code F aeroplanes

When stand 5B is occupied, stands 5, 6 and 7 shall not be in use. Stand 5B is only used for Code E or F aeroplanes.

Code	ICAO	Aircraft type	Wingspan M
 F	A388	Airbus A380-800	79.8
 F	A124	Antonov AN-124-100	73.3
 F	B748	Boeing 747-8	68.5
 F	C5M	Lockheed C-5 Super Galaxy	67.9
 E	B77W, B77L	Boeing 777-300ER, -200LR, -F	64.8
 E	A359, A35K	Airbus A350-900, A350-1000	64.75
 E	B744	Boeing 747-400	64.44

☐☐ E	A345, A346	Airbus A340-500, -600	63.45
☐☐ E	B772, B773	Boeing 777-300, -200	60.93
☐☐ E	A332, A333, A342, A343	Airbus A330-200, -300, Airbus A340-200, -300	60.3
☐☐ E	B788, B789, B78X	Boeing Dreamliner 787-8, 787-9, 787-10	60.12
☐☐ E	IL96	Iljushin IL-96	60.11
☐☐ E	B742, B743	Boeing 747-200, -300	59.6

En-route clearance

Please, do not include the SID in your flight plan route.

By default the local tower controller will give clearance to requested cruise flight level.

Departure with SID:

☐☐

Fastair 312, cleared to Helsinki, runway 08, lpmot 3B departure, flight level 140, squawk 5542
Fastair 312, selvä Helsinkiin, kiitotie 08, lpmot 3B lähtöreitti, lentopinta 140, koodaa 5542

Departure with direct route:

☐☐

Fastair 312, cleared to Helsinki, runway 12, direct lpmot, flight level 100, expect radar climb, squawk 5542
Fastair 312, selvä Helsinkiin, kiitotie 12, lähdöstä suoraan lpmot, lentopinta 100, odota tutka nousua, koodaa 5542

Approach

Please, do not include the STAR in your flight plan route.

Runway 26 is the only runway with an **ILS approach system**. This makes runway 26 the preferred runway during Low Visibility Operations.

- **ILS approach** is used for RNAV capable aircraft
- Visual approaches are used for Non-RNAV capable aircraft

When approaching runway 08, pilots may expect to be cleared for **RNP approach**.

Arriving aircraft may be cleared for the approach already on initial contact with the local controller. Please be ready to copy any clearance and instructions.

Phraseology example:

- On initial contact with approach control, please include the following:
 - Call sign
 - Current flight level
 - Assigned flight level
 - Aircraft type (and wake turbulence category if necessary)
 - Received ATIS broadcast
 - Other restrictions given by previous controller



Turku tower, Quality 4KU, flight level 100, Boeing 738, information B
Turun torni, Quality 4KU, lentopinnalla 100, Boeing 738, tiedotus B



Quality 4KU, Turku tower, radar contact, continue descent to 2200 feet, QNH 1010, cleared ILS Z approach runway 26, report established on localizer, for information next 15 miles below flight level 95 uncontrolled airspace
Quality 4KU, Turun torni, tutkayhteys, jatka laskeutumista 2200 jalkaan, QNH 1010, selvä ILS Z lähestymiseen kiitotie 26, ilmoita suuntasäteellä, tiedoksi seuraavat 15 mailia alle lentopinnan 95 valvomatonta ilmatilaa



Continue descent to 2200 feet, QNH 1010, cleared ILS Z approach runway 26, wilco, Quality 4KU
Jatkan laskeutumista 2200 jalkaan, QNH 1010, selvä ILS Z lähestymiseen kiitotie 26, ilmoitan, Quality 4KU

Operations in Low Visibility Conditions

Runways 08 and 26 are approved for Low Visibility Procedures for Take-offs (LVPTO).

- Procedures will be in force when the RVR value is 550 M or less.
- Pilots will be informed by ATIS or ATC: "LOW VISIBILITY TAKE OFF PROCEDURES IN OPERATION"
- Only one aircraft is allowed on the manoeuvring area when LVPTO is in effect

Low Visibility Procedures for Take-off are not allowed below **RVR 300 meters** due to the absence of RCLL.

Turku airport is only equipped with ILS CAT I approach for runway 26. The approach minimas are OCA (H):

- Category A: 300 (159)
- Category B: 310 (169)
- Category C: 322 (181)
- Category D: 335 (194)


There is also LPV approaches available for both runways (Lateral Precision with Vertical Guidance Approach). See the [RNP approach charts](#) for more information.

Medical helicopter

Note! The base of medical helicopter is located at the airport. The call sign of the medical helicopter is “Finnhems”.

General information

ICAO call sign	FIH20
SSR code	0002
Agreed route	DCT, MAX 1200 FT
base flight rules	VFR only



Medical helicopter pilot shall select **transponder code 0002** prior to contacting Turku Tower.

Nearest hospitals

- EFTV - Turun yliopistollinen keskussairaala (TYKS)

Departure from EFTU base

- VTOL PC1 take-off from FATO (see Appendix 2)
- Initial climb in directions between H070 - H235 and H120 - H200 (red area):



ATC will give VFR clearance (normally direct en-route, 1200 feet or below) and ask pilot to report when airborne. No take-off clearance is given when departing directly from apron.

- Alternative: clear heliport PC1 take-off only between H355 and H055 from FATO (northbound, crossing runway)

Arrival to EFTU base

- Final approach in same directions as departure sectors (towards FATO between H055 - H250 and H020 - H300)
- Aimpoint FIH FATO
- VTOL PC1 landing

ATC will normally give a clearance for approach to own base and ask the pilot to report on ground. No landing clearance is given when arriving directly to apron.

When Quick Reaction Alert (QRA) is in force

- ATCO may give clearance “ONE MIKE”
- VTOL PC1 Take-off and landing only in directions between H140 - H180 and H320 - H005 from FATO (only northbound or southbound departure and landing)
- If procedure is not possible due to wind direction, take-off and landing shall be conducted to runway 08 or 26




FIH20, SELVÄ 1-MIKE MENETELMÄN MUKAAN, QNH 1013, TUULI TYYNTÄ, ILMOITA ILMASSA, SAA YLITTÄÄ KIITOTIE
FIH20, CLEARED 1-MIKE PROCEDURE, QNH 1013, WIND CALM, REPORT AIRBORNE, CLEARED TO CROSS RUNWAY

Frontier Guard flights

General information

Two Frontier Guard aircraft have their base at Turku airport. These aircraft are parked on the Frontier Guard apron south of runway 26 threshold.

ICAO call sign	Radio call sign	Aircraft type	SSR code
FNG 8	FINNGUARD 8	Dornier 228 (D228)	0010
FNG 100	FINNGUARD 100	AS-332 Super Puma (AS32) helicopter	0011



Frontier Guard pilots shall select the **predetermined transponder code** according to the table above prior contacting Turku Tower.

Flight planning

Frontier Guard flights are usually operated under **VFR rules** when weather allows. Departure and arrival can be performed directly from/to apron, or on the active runway, whichever is preferred.

Maritime patrol flights shall include **OPR/FNG RMK/MARITIME PATROL** in the flight plan.

- The above information denotes a flight by the Guard Squadron near the maritime borders of Finland.
- The route section can include lighthouses or islands to better represent the route of the flight
 - In IMC conditions, the route usually consists of RNAV waypoints or coordinates to represent the planned route as close as possible

Revision #15

Created 28 July 2023 16:49:20 by Otto Tuhkunen (1339541)

Updated 4 January 2025 10:31:27 by Otto Tuhkunen (1339541)